



Installation Guide

BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER BMW R1250GS & GSA



Thank you for purchasing Jesse Luggage for your motorcycle! Your new luggage has been designed to be the most rugged, durable and reliable luggage on the market today. Jesse Luggage Systems has been designing and manufacturing aluminum panniers since 1991. Proudly hand crafted in the USA, our luggage has been tested and proven worldwide, and with proper installation, care and maintenance, your new luggage will last you a lifetime of adventure.

We'll see you on the trail!

BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER BMW R1250GS & GSA



Kit includes:

- 1 – Rear Crossover Support Bar
- 2 – Main subframe support brackets
- 2 – Racks (exhaust/non-exhaust side)
- 2 – Foot peg subframe brackets
- 2 – Passenger foot peg support brackets – R1200GS only

**DO NOT REMOVE INSTALLED HARDWARE UNTIL PART IS READY TO ASSEMBLE TO BIKE.
Bolts and hardware are placed in their corresponding locations.**

**BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER
BMW R1250GS & GSA**



**REMOVE FACTORY MOUNTED LUGGAGE RACKS (GSA ONLY) AND
PASSENGER SEAT**



Installation Guide

BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER BMW R1250GS & GSA

R1200GS Model


To allow for proper adjustment of your luggage, remove factory mounted passenger foot peg support brackets and replace with Jesse Luggage foot peg subframe bracket and support brackets.



BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER BMW R1250GS & GSA

1. Remove factory bolt from this location.

2. Install non-exhaust sub-frame with bolts provided, using the vacant hole and attach split lock collar to bike frame.

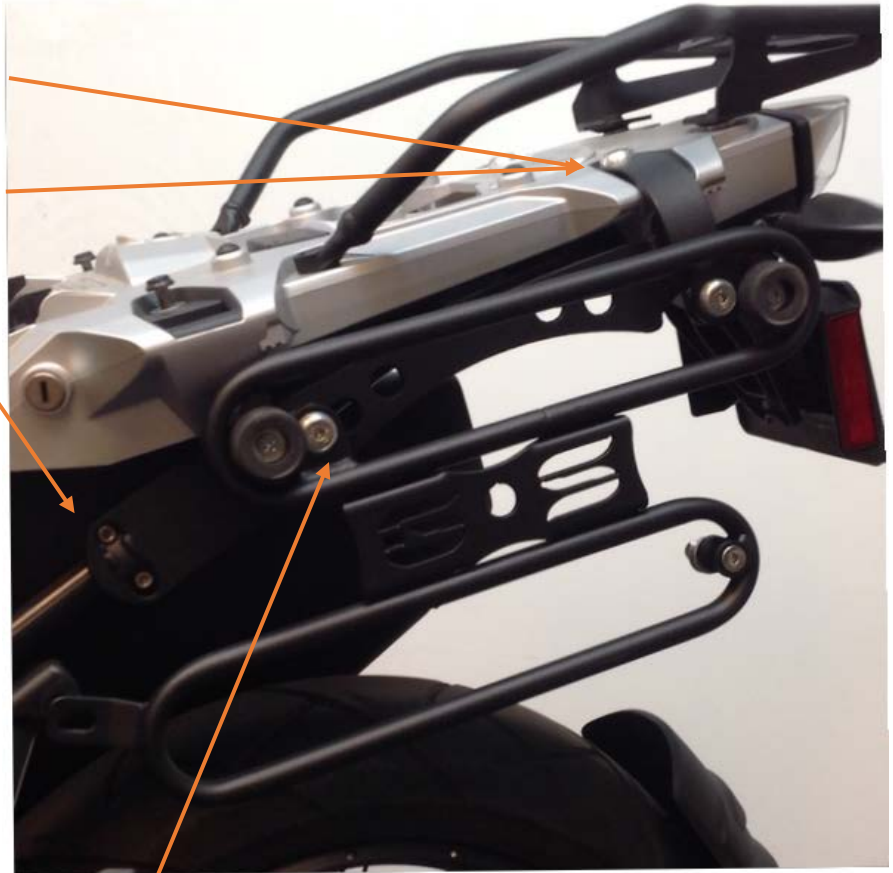

3. Attach non-exhaust rack on to subframe, using hardware provided, making sure the 1" spacer is between the subframe and rack, leaving slightly loose.

4. Repeat these steps on exhaust side.

BMW R1200GS & GSA LIQUID COOLED 2013 - AFTER BMW R1250GS & GSA



5. Install rear crossover support bar using hardware provided and begin to tighten all bolts.

You are now ready to mount your panniers to their respective frames.